

PRODUCT DIMENSIONS


MODEL #	WMMF5930P/YWMMF5930P/MMMF6030P/YMMMF6030P/ KMMF330P/YKMMF330P/WMMF7330R/YWMMF7330R/ WMMF7530R/MMMF8030P/YMMMF8030P/KMMF530P/ YKMMF530P/KMMF730P/YKMMF730P/JMHF730R/ YJMHF730R/JMHF930R/YJMHF930R		
Unit of Measurement	in	cm	
Overall Width (A)	30	76	
Overall Height (B)	17 ⁷ / ₈	45.4	
Height of the door (C)	15	38.2	
Depth with door (D)	12¾	32.4	
Depth with door open 90° (E)	41.4	105.3	
Depth with door with Bump Out Kit (L hook) (F1)	13.8	35.0	
Depth with door with Bump Out Kit (M hook) (F2)	14.3	36.3	
Depth with door with Bump Out Kit (N hook) (F3)	14.8	37.6	
Depth with door with Bump Out Kit (P hook) (F4)	15.3	38.9	
Depth with door with Bump Out Kit (R hook) (F5)	15.8	40.2	
Depth with door open 90° with Bump Out Kit (L hook) (G1)	42.5	107.8	
Depth with door open 90° with Bump Out Kit (M hook) (G2)	43.0	109.1	
Depth with door open 90° with Bump Out Kit (N hook) (G3)	43.5	110.4	
Depth with door open 90° with Bump Out Kit (P hook) (G4)	44.0	111.7	
Depth with door open 90° with Bump Out Kit (R hook) (G5)	44.5	113.0	

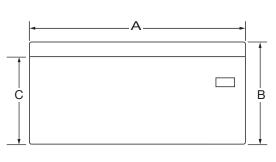


FRONT VIEW

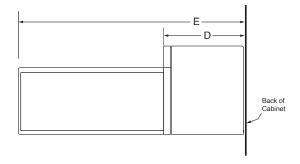

SIDE VIEW

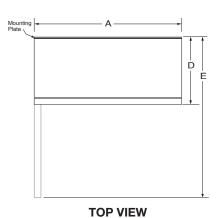


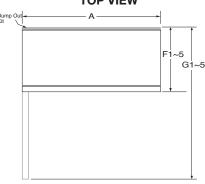


TOP VIEW WITH BUMP OUT KIT

MICROWAVE INTERIOR CAVITY DIMENSIONS

MODEL #	WMMF5930P/YWMMF5930P/MMMF6030P/YMMMF6030P KMMF330P/YKMMF330P/WMMF7330R/YWMMF7330R WMMF7530R/MMMF8030P/YMMMF8030P/KMMF530P YKMMF530P/KMMF730P/YKMMF730P/JMHF730R YJMHF730R/JMHF930R/YJMHF930R	
Unit of Measurement	in	cm
Cavity Height (A))	9.1	23
Cavity Width (B)	18.1	46
Cavity Depth (C)	11	27.9

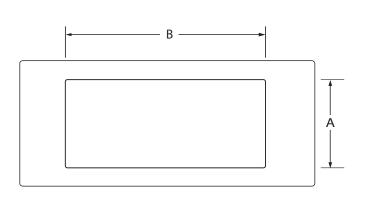

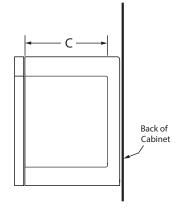


CAVITY INTERIOR FRONT VIEW

CAVITY INTERIOR SIDE VIEW

OPENING/CLEARANCE DIMENSIONS

MODEL #	WMMF5930P/YWMMF5930P/MMMF6030P YMMMF6030P/KMMF330P/YKMMF330P WMMF7330R/YWMMF7330R/WMMF7530R MMMF8030P/YMMMF8030P/KMMF530P YKMMF530P/KMMF730P/YKMMF730P JMHF730R/YJMHF730R/JMHF930R JMHF930R/YJMHF930R	
OPENING/CLEARANCE DIMENSIONS	in	cm
Width of cabinet opening (minimum) (A)	30	76.2
Typical height from cooking surface to floor based on 36" (91.4 cm) countertops. (B)	36	91.4
Typical height from top of cabinet to cooking surface based on 36" (91.4 cm) countertops. (C)	30	76.2
Recommened height from top of cabinet to cooking surface based on 36" (91.4 cm) countertops. (C)	36	91.4
Minimum height from floor to top of cabinet opening. (B + C = D). (D)	66	167.6
Recommended height from floor to top of cabinet opening (B + C = D). (D)	72	183
Recommended electrical connection location. (E)	See below schematic	
Minimum height from floor to bottom of the microwave oven (F)	12 ¹ / ₈	30.8
Recommended height from floor to bottom of the microwave oven (F)	181/8	46
Minimum height of Flat back surface (G)	18	45.8

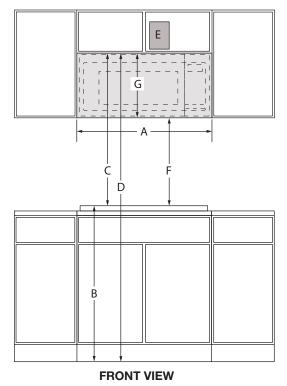

ELECTRICAL REQUIREMENTS

120 V, 60 Hz AC only, 15 A or 20 A fused, electrical supply is required. A time-delay fuse or dedicated circuit is recommended. Do not use an extension cord.

LOCATION REQUIREMENTS

Support structure must be able to support 150 lb (68 kg) including microwave oven and upper cabinet including contents. Mounting plate must attach to a minimum of one $2" \times 4"$ (5.1 cm x 10.2 cm) wall stud.

Mounting distance between a fixed wall on the higed-side of the door and the microwave oven is 5" (12.7 cm).


VENTING REQUIREMENTS

The microwave oven is factory set for recirculating ventilation. To vent through the roof or wall, refer to installation instructions for further information.

OPENING/CLEARANCE DIMENSIONS

MODEL #	WMMF5930P/YWMMF5930P/MMMF6030P/YMMMF6030P KMMF330P/YKMMF330P/WMMF7330R/YWMMF7330R WMMF7530R/MMMF8030P/YMMMF8030P/KMMF530P YKMMF530P/KMMF730P/YKMMF730P/JMHF730R YJMHF730R/JMHF930R/YJMHF930R	
Opening/Clearance Measurement	in	cm
Depth of upper cabinet (minimum-maximum) Stand Out* (A)	12~12.75	30.5~32.4
Depth of upper cabinet (minimum-maximum) Flush* (B)	12.75~13	32.4~33
Depth of upper cabinet (minimum-maximum)* (C)	0.5	1.27
Can this product be installed flush? Flush refers to there appliance not protruding past the cabinet depth. (Y/N)	(A) N (B) Y	

^{*}This microwave oven is factory set for 12" (30.5 cm)~13" (33.02 cm) depth of upper cabinet, install with the provided mouting plate.

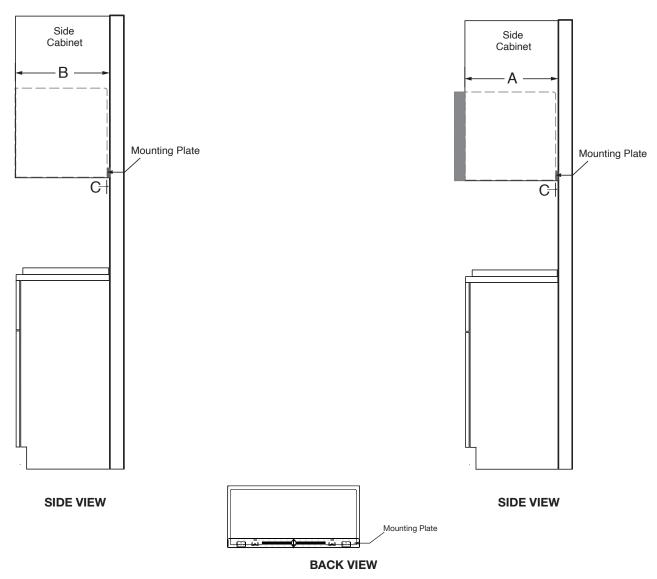

OPENING/CLEARANCE DIMENSIONS

MODEL #	WMMF5930P/YWMMF5930P/MMMF6030P YMMMF6030P/KMMF330P/YKMMF330P WMMF7330R/YWMMF7330R/WMMF7530R MMMF8030P/YMMMF8030P/KMMF530P YKMMF530P/KMMF730P/YKMMF730P JMHF730R/YJMHF730R/JMHF930R/YJMHF930R		
OPENING/CLEARANCE DIMENSIONS	in	cm	
Depth of upper cabinet (minimum-maximum) Flush* (A1)	13¾~14	35~35.6	
Depth of upper cabinet (minimum-maximum) Stand out* (A2)	13~13¾	33~35	
Depth of upper cabinet (minimum-maximum) Flush* (B1)	141/4~141/2	36.2~36.8	
Depth of upper cabinet (minimum-maximum) Stand out* (B2)	14~141⁄4	35.6~36.2	
Depth of upper cabinet (minimum-maximum) Flush* (C1)	14¾~15	37.5~38.1	
Depth of upper cabinet (minimum-maximum) Stand out* (C2)	141/2~143/4	36.8~37.5	
Depth of upper cabinet (minimum-maximum) Flush* (D1)	151/4~151/2	38.7~39.4	
Depth of upper cabinet (minimum-maximum) Stand out* (D2)	15~151⁄4	38.1~38.7	
Depth of upper cabinet (minimum-maximum) Flush* (E1)	15¾~16	40~40.6	
Depth of upper cabinet (minimum-maximum) Stand out* (E2)	151/2~153/4	39.4~40	
Back of the microwave oven to back of the cabinet or Wall (F)	1.5~3.5	3.8~8.9	
Can this product be installed flush? Flush refers to the appliance not protruding past the cabinet depth. (Y/N)	(A1, B1, C1, D1, E1) Y (A2, B2, C2, D2, E2) N		

D-Depth of upper cabinet

*For the depth of upper cabinet larger than 13" (33.02 cm), and less than or equal to 16" (40.64 cm) depth of upper cabinet, install with the optional bump out mounting kit W11630300, the bump out mounting kit is not provided, but can purchased from Whirlpool®.

