



---



## **INSTALLATION INSTRUCTIONS**

### **COMMERCIAL WASHER-EXTRACTOR**

---

MYR20, MYR25, MYR30, MYR40, MYR55, MYR65  
MYS20, MYS30, MYS40, MYS55, MYS65

---

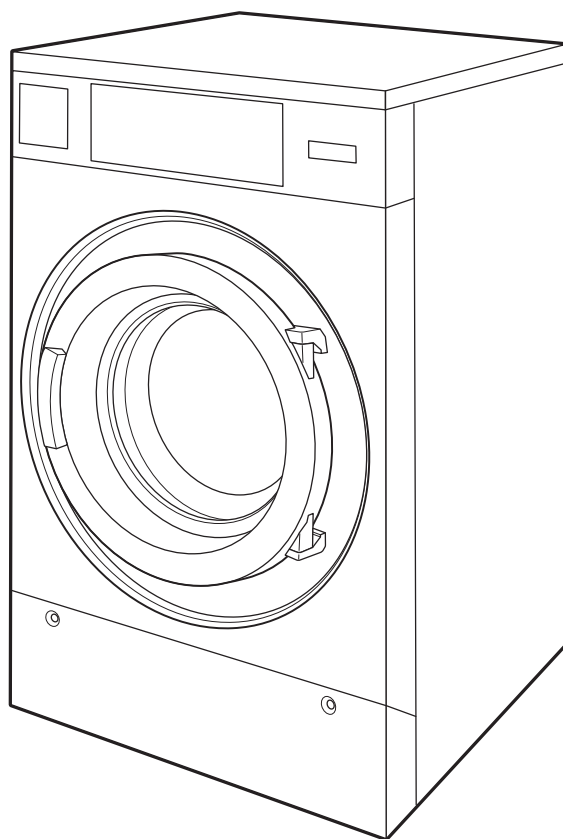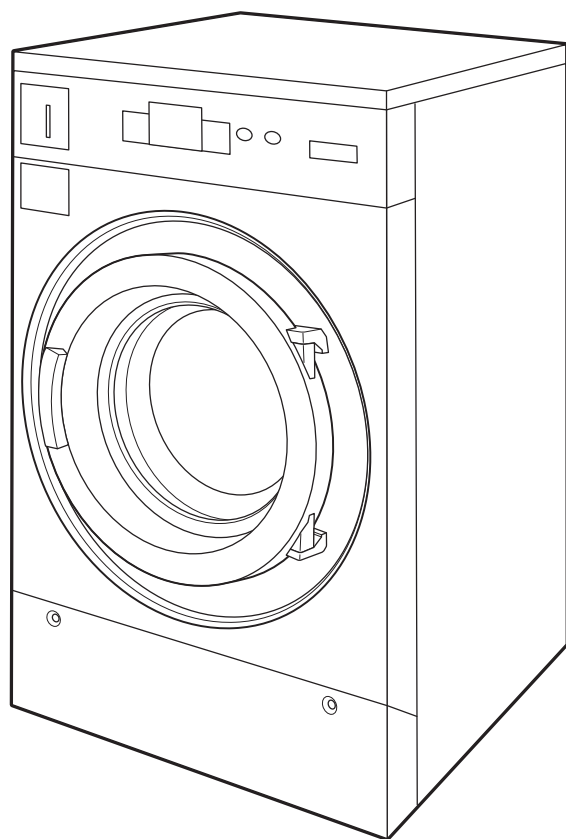

---

# TABLE OF CONTENTS

WASHER SAFETY .....	2
DIMENSIONS AND TECHNICAL SPECIFICATIONS .....	4
INSTALLATION REQUIREMENTS.....	8
LOCATION REQUIREMENTS.....	8
ELECTRICAL REQUIREMENTS.....	9
OPTIONS.....	9
FLOOR REQUIREMENTS.....	10
INSTALLATION OF THE WASHER-EXTRACTOR WITHOUT PEDESTAL BASE .....	11
INSTALLATION OF THE RIGID WASHER-EXTRACTOR WITHOUT PEDESTAL BASE .....	12
INSTALLATION INSTRUCTION .....	13
ELECTRICAL CONNECTION .....	14
WASHER MAINTENANCE .....	16
WARRANTY .....	17

---

## WASHER SAFETY

---

### Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.”

These words mean:

**⚠ DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**⚠ WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electrical shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Read all instructions before using the washer.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not add gasoline, dry cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the washer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on, in, or with the washer. Close supervision of children is necessary when the washer is used near children.
- Before the washer is removed from service or discarded, remove the door or lid.
- Do not reach into the washer if the drum, tub, or agitator is moving.
- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any maintenance unless specifically recommended in this manual that you understand and have the skills to carry out.
- See “Electrical Requirements” for grounding instructions.
- This appliance must have power locked out using proper lockout and tag out procedure during service and when replacing parts. Refer to the OSHA standard for “The Control of Hazardous Energy (Lockout/Tag out)”, Title 29 Code of Federal Regulations (CFR) Part 1910.147.

## SAVE THESE INSTRUCTIONS

### IMPORTANT:

- The Circuit must be a dedicated circuit and may not be combined with any lighting circuit.
- Adequate grounding is essential to washer operation.
- Do not fuse the neutral or grounding circuit.
- Certain internal parts are intentionally not grounded and may present a risk of electrical shock only during service. Do not contact the inlet valve coil straps while the appliance is energized.
- This appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.


Some models and features depicted in this booklet may not be available in your region or country.

# DIMENSIONS AND TECHNICAL SPECIFICATIONS

Model	Cylinder Volume Liters (cubic feet)	Cylinder diameter mm (in)	Cylinder depth mm (in)	Dry load capacity kg (lb)	Maximum spin RPM	Maximum extract force (G-force)
MYR20	73 (2.58)	530 (20.9)	352 (13.9)	9 (20)	838	200
MYR25	101 (3.55)	620 (24.4)	352 (13.9)	11 (25)	760	200
MYR30	131 (4.61)	620 (24.4)	454 (17.9)	14 (30)	760	200
MYR40	171 (6.04)	750 (29.5)	411 (16.2)	18 (40)	693	200
MYR55	230 (8.14)	750 (29.5)	548 (21.6)	25 (55)	693	200
MYR65	262 (9.25)	750 (29.5)	621 (24.4)	30 (65)	693	200
MYS20	73 (2.58)	530 (20.9)	352 (13.9)	9 (20)	1,165	400
MYS30	131 (4.61)	620 (24.4)	454 (17.9)	14 (30)	1,085	400
MYS40	171 (6.04)	750 (29.5)	411 (16.2)	18 (40)	985	400
MYS55	230 (8.14)	750 (29.5)	548 (21.6)	25 (55)	985	400
MYS65	262 (9.25)	750 (29.5)	621 (24.4)	30 (65)	912	350

## Dimensions

### Washer Dimensions

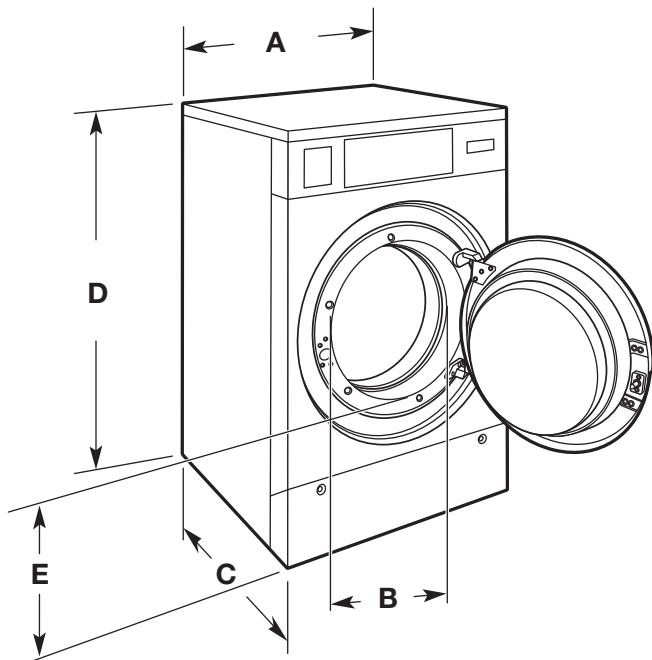

	A	B	C	D	E
Model	Width mm (in)	Door Opening mm (in)	Depth mm (in)	Height mm (in)	Door Height mm (in)
MYR20	660 (26)	328 (12.9)	686 (27)	1,112 (43.8)	425 (16.8)
MYR25	750 (29.5)	410 (16.1)	725 (28.5)	1,222 (48.1)	419 (16.5)
MYR30	750 (29.5)	410 (16.1)	840 (33.1)	1,222 (48.1)	419 (16.5)
MYR40	890 (35.0)	459 (18.1)	876 (34.5)	1,410 (55.5)	537 (21.2)
MYR55	890 (35.0)	459 (18.1)	1,011 (39.8)	1,410 (55.5)	537 (21.2)
MYR65	890 (35.0)	459 (18.1)	1,085 (42.7)	1,410 (55.5)	537 (21.2)
MYS20	710 (28.4)	328 (12.9)	721 (28.4)	1,112 (43.8)	423 (16.7)
MYS30	795 (31.3)	410 (16.1)	872 (34.3)	1,222 (48.1)	420 (16.5)
MYS40	970 (38.2)	459 (18.1)	901 (35.5)	1,410 (55.5)	546 (21.5)
MYS55	970 (38.2)	459 (18.1)	1,037 (40.8)	1,410 (55.5)	546 (21.5)
MYS65	970 (38.2)	459 (18.1)	1,110 (43.7)	1,410 (55.5)	546 (21.5)


### Additional Clearances:

- Additional spacing of 1" (25 mm) on both sides of the washer is required.
- Additional spacing of 20" (500 mm) between the rear of the washer and the wall is required.
- Additional spacing of 34" (865 mm) above the washer is required.

# DIMENSIONS AND TECHNICAL SPECIFICATIONS

## Dimensions

Washer Rear Dimensions

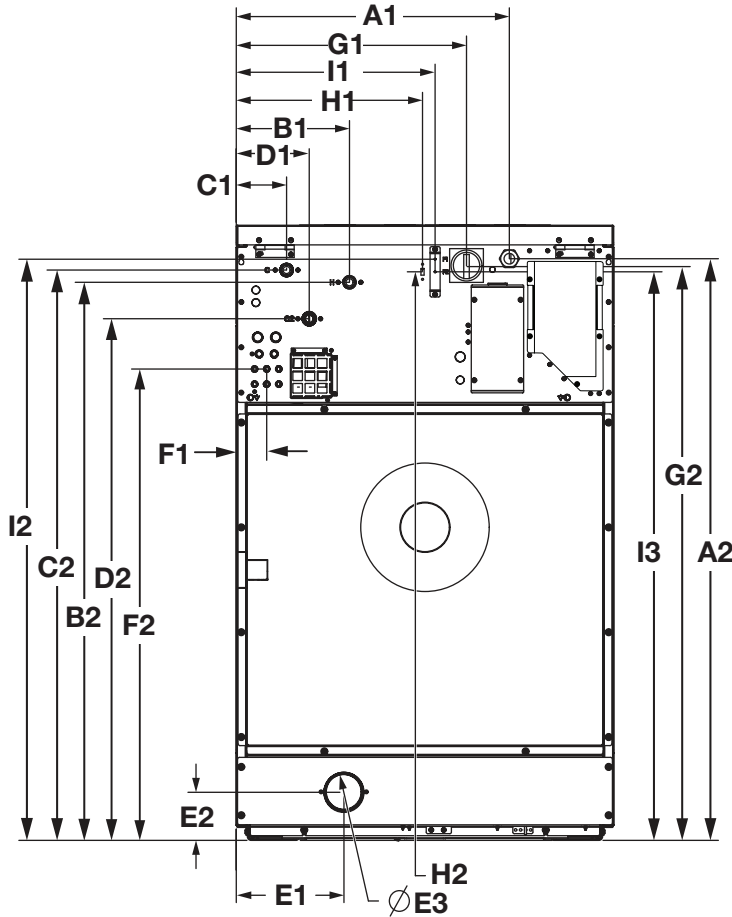

A. Electrical Connection	F. Liquid Soap Connection
B. Hot Water	G. Disconnect
C. Cold Water	H. USB Port
D. 2 <sup>nd</sup> Cold Water (Option)	I. Fuses
E. Drain	


	MYR20	MYR25	MYR30	MYR40	MYR55	MYR65
A1 mm (in)	451 (17.7)	543 (21.4)	543 (21.4)	578 (22.7)	578 (22.7)	578 (22.7)
A2 mm (in)	1,045 (41.1)	1,156 (45.5)	1,156 (45.5)	1,343 (52.8)	1,343 (52.8)	1,343 (52.8)
B1 mm (in)	225 (8.8)	225 (8.8)	225 (8.8)	289 (11.4)	289 (11.4)	289 (11.4)
B2 mm (in)	1,000 (39.4)	1,108 (43.6)	1,108 (43.6)	1,224 (48.2)	1,224 (48.2)	1,224 (48.2)
C1 mm (in)	101 (4.0)	101 (4.0)	101 (4.0)	175 (6.8)	175 (6.8)	175 (6.8)

	MYR20	MYR25	MYR30	MYR40	MYR55	MYR65
C2 mm (in)	1,023 (40.3)	1,133 (44.6)	1,133 (44.6)	1,321 (52)	1,321 (52)	1,321 (52)
D1 mm (in)	146 (5.7)	146 (5.7)	146 (5.7)	175 (6.8)	175 (6.8)	175 (6.8)
D2 mm (in)	927 (36.5)	1,035 (40.8)	1,035 (40.8)	1,224 (48.2)	1,224 (48.2)	1,224 (48.2)
E1 mm (in)	168 (6.6)	213 (8.4)	213 (8.4)	283 (11.1)	283 (11.1)	283 (11.1)
E2 mm (in)	95 (3.7)	95 (3.7)	95 (3.7)	133 (5.2)	133 (5.2)	133 (5.2)
E3 mm (in)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)
F1 mm (in)	60 (2.3)	70 (2.7)	70 (2.7)	70 (2.7)	70 (2.7)	70 (2.7)
F2 mm (in)	826 (32.5)	937 (36.9)	937 (36.9)	1,095 (43.1)	1,095 (43.1)	1,095 (43.1)
G1 mm (in)	368 (14.5)	458 (18)	458 (18)	492 (19.4)	492 (19.4)	492 (19.4)
G2 mm (in)	1,032 (42.6)	1,140 (44.9)	1,140 (44.9)	1,330 (52.3)	1,330 (52.3)	1,330 (52.3)
H1 mm (in)	280 (11)	371 (14.6)	371 (14.6)	406 (16.0)	406 (16.0)	406 (16.0)
H2 mm (in)	1,019 (40.1)	1,130 (44.5)	1,130 (44.5)	1,317 (51.8)	1,317 (51.8)	1,317 (51.8)
I1 mm (in)	305 (12)	394 (15.5)	394 (15.5)	429 (16.8)	429 (16.8)	429 (16.8)
I2 mm (in)	1,054 (41.5)	1,155 (45.5)	1,155 (45.5)	1,343 (52.9)	1,343 (52.9)	1,343 (52.9)
I3 mm (in)	1,019 (40.1)	1,130 (44.5)	1,130 (44.5)	1,318 (51.8)	1,318 (51.8)	1,318 (51.8)

# DIMENSIONS AND TECHNICAL SPECIFICATIONS

## Dimensions

Washer Rear Dimensions

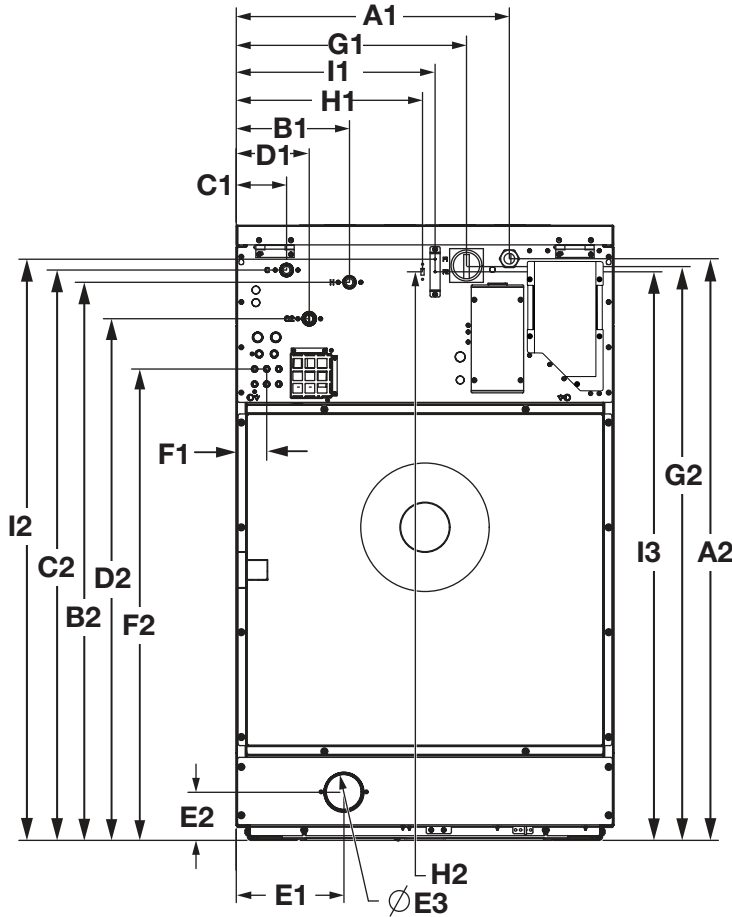

A. Electrical Connection	F. Liquid Soap Connection
B. Hot Water	G. Disconnect
C. Cold Water	H. USB Port
D. 2 <sup>nd</sup> Cold Water (Option)	I. Fuses
E. Drain	

	MYS20	MYS30	MYS40	MYS55	MYS65
A1 mm (in)	502 (19.8)	588 (23.2)	657 (25.8)	657 (25.8)	657 (25.8)
A2 mm (in)	1,048 (41.3)	1,159 (45.7)	1,347 (53)	1,347 (53)	1,347 (53)
B1 mm (in)	225 (8.8)	225 (8.8)	300 (11.8)	300 (11.8)	300 (11.8)
B2 mm (in)	1,003 (39.4)	1,112 (43.8)	1,228 (48.4)	1,228 (48.4)	1,228 (48.4)
C1 mm (in)	101 (4.0)	101 (4.0)	175 (6.9)	175 (6.9)	175 (6.9)

	MYS20	MYS30	MYS40	MYS55	MYS65
C2 mm (in)	1,028 (40.5)	1,137 (44.8)	1,324 (52.2)	1,324 (52.2)	1,324 (52.2)
D1 mm (in)	146 (5.8)	146 (5.8)	175 (6.9)	175 (6.9)	175 (6.9)
D2 mm (in)	930 (36.7)	1,041 (41)	1,228 (48.8)	1,228 (48.8)	1,228 (48.8)
E1 mm (in)	229 (9)	229 (9)	270 (10.7)	270 (10.7)	270 (10.7)
E2 mm (in)	90 (3.5)	90 (3.5)	111 (4.4)	111 (4.4)	111 (4.4)
E3 mm (in)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)
F1 mm (in)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)	70 (2.8)
F2 mm (in)	826 (32.5)	936 (36.9)	1,094 (43.1)	1,094 (43.1)	1,094 (43.1)
G1 mm (in)	419 (16.5)	502 (19.8)	572 (22.5)	572 (22.5)	572 (22.5)
G2 mm (in)	1,035 (40.8)	1,146 (45.2)	1,334 (52.5)	1,334 (52.5)	1,334 (52.5)
H1 mm (in)	330 (13)	416 (16.4)	486 (19.2)	486 (19.2)	486 (19.2)
H2 mm (in)	1,023 (40.3)	1,133 (44.6)	1,321 (52)	1,321 (52)	1,321 (52)
I1 mm (in)	355 (14)	441 (17.4)	511 (20.2)	511 (20.2)	511 (20.2)
I2 mm (in)	1,048 (41.3)	1,159 (45.7)	1,347 (53)	1,347 (53)	1,347 (53)
I3 mm (in)	1,023 (40.3)	1,133 (44.6)	1,321 (52)	1,321 (52)	1,321 (52)

# DIMENSIONS AND TECHNICAL SPECIFICATIONS

## Dimensions

Crated Dimensions			
Model	Crated Width mm (in)	Crated Depth mm (in)	Crated Height mm (in)
MYR20	705 (27.8)	841 (33.1)	1,270 (50.0)
MYR25	800 (31.5)	880 (34.6)	1,381 (54.4)
MYR30	800 (31.5)	991 (39.0)	1,381 (54.4)
MYR40	940 (37.0)	1,029 (40.5)	1,560 (61.43)
MYR55	940 (37.0)	1,169 (46.0)	1,560 (61.4)
MYR65	940 (37.0)	1,242 (48.9)	1,560 (61.4)
MYS20	756 (29.8)	854 (33.4)	1,270 (50.0)
MYS30	841 (33.1)	1,010 (39.8)	1,381 (54.4)
MYS40	1,003 (39.5)	1,042 (41.0)	1,560 (61.4)
MYS55	1,003 (39.5)	1,178 (46.4)	1,560 (61.4)
MYS65	1,003 (39.5)	1,251 (49.3)	1,560 (61.4)

Approximate Weight		
Model	Uncrated-kg (lb)	Crated-kg (lb)
MYR20	151 (333)	166 (365)
MYR25	203 (447)	218 (480)
MYR30	222 (489)	237 (523)
MYR40	312 (688)	328 (724)
MYR55	332 (732)	349 (769)
MYR65	347 (764)	364 (802)
MYS20	188 (415)	202 (446)
MYS30	264 (582)	279 (616)
MYS40	386 (851)	403 (889)
MYS55	406 (894)	423 (933)
MYS65	428 (944)	446 (984)

## Water, Drain, External Supply Connections

Model	Number of water inlets	Optional third water inlet	Inlet sizes (BSPP*)	Operating Pressure Bar (Psi)	Number of dispenser compartments	External chemical connections, number	Drain valve drain, Size mm (in)
ALL	2	Yes	3/4"	1-8 (20-120)	4	10	76 (3)

\* = 3/4" GHT adapter included for machines sold in North America.

## Energy/Water Usage

Model	Capacity (lbs)	Average Cycle Water Use (Gallons)		Total/Hot Ratio
		Hot Water	Total Water	
MYR20 MYS20	20	4	11.7	2.925
MYR25	25	6	17.6	2.925
MYR30 MYS30	30	8	23.4	2.925
MYR40 MYS40	40	11	32.2	2.925
MYR55 MYS55	55	14	41	2.925
MYR65 MYS65	65	17	49.7	2.925

# INSTALLATION REQUIREMENTS

## Tools and Parts


Parts supplied:




Water inlet hoses (2)




Inlet hose washers (4)

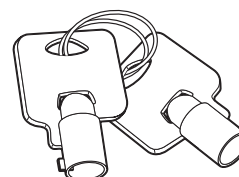


Service Keys

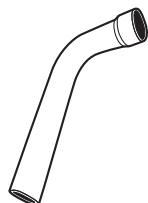


Drain hose

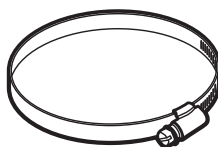


Hose clamp

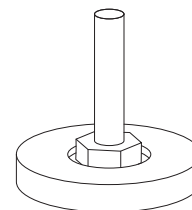


Foot Leveling (4)  
(MYS20, MYS30, MYS40, MYS55,  
MYS65 only)

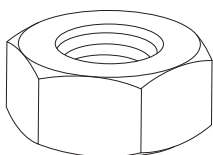


Nut (4)  
(MYS20, MYS30, MYS40, MYS55, MYS65 Only)



Washer  
(4) (MYR20, MYR25, MYR30 only)  
(8) (MYR40, MYR55, MYR65 only)

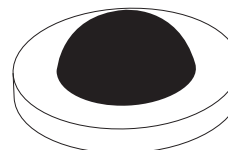

Filter screen (2)  
(MYR55, MYS55, MYR65, MYS65 only)

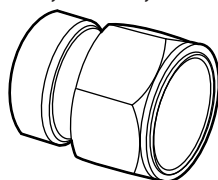

Metric thread adapter (2)  
(Countries with metric pipe connections)

## LOCATION REQUIREMENTS

Forces transmitted by the washing machine

	MYR20	MYR25	MYR30	MYR40	MYR55	MYR65
Static floor load (kN - lb)	1.49 (334)	1.99 (447)	2.18 (489)	3.07 (688)	3.26 (731)	3.40 (764)
Dynamic floor load (kN - lb)	2.42 (543)	4.01 (900)	5.12 (1,150)	5.60 (1,260)	7.52 (1,690)	8.82 (1,981)
Maximum vertical load (kN - lb)	3.91 (877)	6.00 (1,347)	7.30 (1,639)	8.67 (1,948)	10.80 (2,421)	12.22 (2,745)
Dynamic load frequency (Hz)	13.97	13.20	13.17	11.59	11.55	11.59
G factor	200	200	200	200	200	200
Anchorage points	4	4	4	8	8	8
Min Concrete Thk. (mm - in)	100 (4)	100 (4)	150 (6)	150 (6)	200 (8)	200 (8)



# ELECTRICAL REQUIREMENTS


Model	Capacity (lb)	RPM	Voltage (1P)	Frequency (Hz)	Total Amps	Circuit Breaker	Conductor Size
MYR20	20	838	115	60	9.6	15	14
			208-240	50/60	4.8	15	14
MYR25	25	790	115	60	14.3	20	12
			208-240	50/60	8.1	15	14
MYR30	30	790	115	60	16.2	20	12
			208-240	50/60	8.1	15	14
MYR40	40	693	208-240	50/60	12.5	15	14
MYR55	55	693	208-240	50/60	12.5	15	14
MYR65	65	693	208-240	50/60	12.5	15	14
MYS20	20	1,165	115	60	14.3	20	12
			208-240	50/60	8.1	15	14
MYS30	30	1,085	208-240	50/60	13.2	20	12
MYS40	40	985	208-240	50/60	16.2	20	12
MYS55	55	985	208-240	50/60	18.6	25	12
MYS65	65	915	208-240	50/60	18.6	25	12

This appliance is intended to be connected to a supply circuit protected by an over current-protective device (fuse breaker) sized according to the “Circuit Breaker (D-Curve)” column appropriate to your location.

## OPTIONS

### PX (Coin Ready) and PR (Card Reader Ready) models only

A card reader adapter plate is provided with PX and PR models.

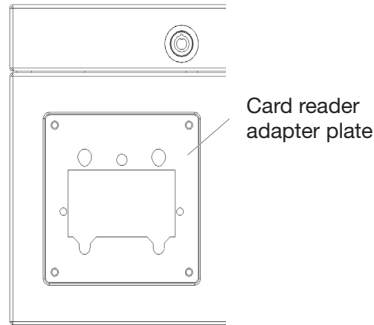

PX: This washer is coin acceptor ‘cable’ ready. It will accept a variety of coin acceptors, but does NOT come with a coin acceptor. Refer to the coin acceptor manufacturer for proper washer set-up. Prior to installing a coin acceptor, remove the card reader adapter plate by removing (x4) M4 nuts.


PX models are also debit card ‘cable’ ready (refer to PR information, below for proper setup).

PR: This washer is debit card ‘cable’ ready. It will accept a variety of debit card systems, but does NOT come with a debit card reader. Refer to the debit card reader manufacturer for proper washer set-up. In models converted to a generation 1 debit card system, debit pulses represent the equivalent of one coin (coin 1).

# FLOOR REQUIREMENTS

## Mounting Holes Placement

Model	Distance						
	A (mm/in)	B (mm/in)	C (mm/in)	D (mm/in)	E (mm/in)	F (mm/in)	G (mm/in)
MYR20	519/20.4	474/18.7	N/A	N/A	70/2.7	65/2.6	167/6.6
MYR25	615/24.2	474/18.7	N/A	N/A	67/2.6	65/2.6	186/7.3
MYR30	615/24.2	574/22.6	N/A	N/A	67/2.6	65/2.6	201/7.9
MYR40	751/29.6	580/22.8	82/3.2	416/16.4	70/2.7	52/2	253/9.9
MYR55	751/29.6	716/28.2	82/3.2	552/21.7	70/2.7	52/2	253/9.9
MYR65	751/29.6	789/31.0	82/3.2	625/24.6	70/2.7	52/2	253/9.9
MYS20	379/14.9	592/23.3	N/A	N/A	166/6.5	45/1.8	84/3.3
MYS30	499/19.7	708/27.9	N/A	N/A	148/5.8	47/1.8	177/4.6
MYS40	669/26.3	661/26.0	N/A	N/A	151.0/5.9	50/2.0	190/7.5
MYS55	669/26.3	797/31.4	N/A	N/A	151.0/5.9	50/2.0	190/7.5
MYS65	669/26.3	870/34.3	N/A	N/A	151.0/5.9	50/2.0	190/7.5

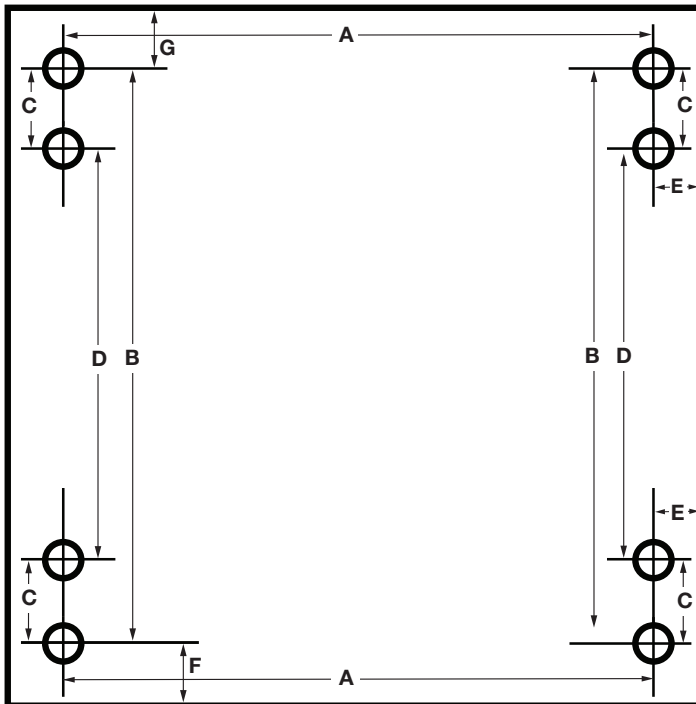

Front

There are separate instructions if using a pedestal (those instructions are in the pedestal installation manual).

There are separate instructions if using an optional front mount adapter plate (those details are in the front mount adapter plate installation manual).

# INSTALLATION OF THE WASHER-EXTRACTOR WITHOUT PEDESTAL BASE

## **⚠ WARNING**

### **Excessive Weight Hazard**

**Use two or more people and mechanical equipment to lift, move and install washer.**

**Failure to do so can result in back or other injury.**

### **Anchoring MYR models (Rigid Machines)**

## **⚠ WARNING**



### **Crush Hazard**

**Washer can tip over if not properly installed on platform or pedestal.**

**Washer must be bolted to the floor per installation instructions.**

**Failure to follow these instructions can result in death or serious injury.**

### **Anchoring MYS models (Soft Machines)**

## **⚠ WARNING**



### **Crush Hazard**

**Washer can tip over if not properly installed on platform or pedestal.**

**Shipping brackets must be removed per installation instructions before operating.**

**Failure to follow these instructions can result in death or serious injury.**

A static engineer must be consulted to evaluate the static requirements with respect to permissible loads, vibrations, and noise level in the building where the washer is installed.

The manufacturer does not recommend installing the washer in a room with a cellar underneath or on a floor with rooms underneath. The washer must be leveled from side to side, as well as from front to rear. If the washer is not properly leveled, it may become out of balance even though the drum remains balanced.

Rigid washers must be anchored to the floor. Correct construction of the anchorage to the floor is essential to ensure correct operation of the appliance and to prevent serious damage to its structure.

Rigid washers must not be installed on non-foundation floors without authorization from a technician familiar with the structure and weight-bearing capacity of the building.

Check the weight of the washer and its contents, plus the dynamic forces generated during spinning. The manufacturer does not accept responsibility for any damage due to vibration in this type of installation.

Shipping brackets need to be uninstalled from the soft washers prior to operation. Remove the toe panel, front panel, and rear cover to access the shipping bracket. The shipping brackets are painted white for ease of identification.

Leveling feet are provided with soft machines. Use the feet to level the machine in its final operating location. Use the level to level the top of the washer. Turn the leveling legs to adjust the setting. Check that the washer does not move front-to-back, side-to-side, or diagonally when pushed on its top edges. Keep the legs as short as possible for best performance.


Once the washer is leveled the lock nuts must be tightened up against the top of the foot bushing with the 17 mm (11/16") open end wrench. This will keep the setting from changing.

Anchoring is not required but four 12 mm holes are provided if anchoring is desired.

There is a whisker switch behind the toe panel, located below the tub and to the left of the drain. This switch is set at the factory, but in the event that it falls out of adjustment, with the shipping brackets installed, this switch should be set so the whisker is centered in the opening.

# INSTALLATION OF THE RIGID WASHER-EXTRACTOR WITHOUT PEDESTAL BASE

## Using Expansion Bolts

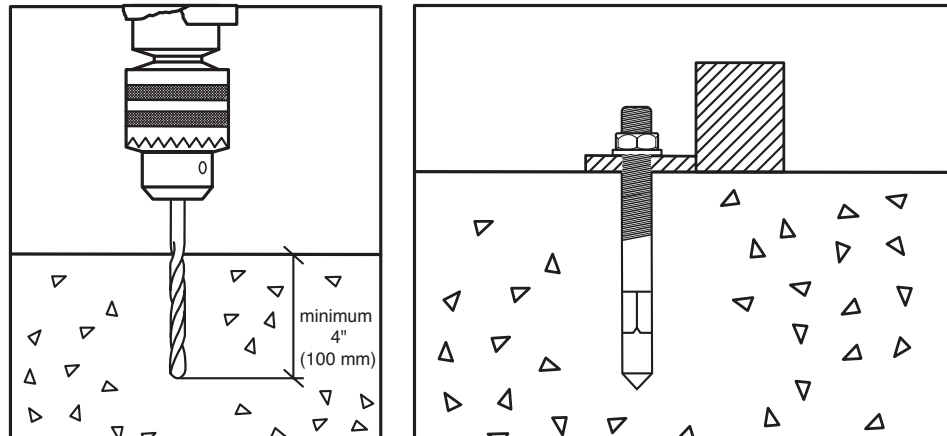

Before anchoring the machine to the floor, make sure that its minimum resistance is equal or higher than 3,500 psi (25 N/mm<sup>2</sup>).

First mark the locations of the mounting holes using the dimensions specified in the “Rigid Washing Machines” chart.

Next drill the mounting holes. Follow the manufacturing installation instructions, but the holes must be at least 4" (100 mm) deep. The holes must not go all the way through the floor. Clean the holes with compressed air.


For the smoothest operation Whirlpool recommends that the washer be set with a precision, high strength, non-metallic, non-shrink grout designed for precision grouting. Grout should have a minimum compressive strength of 10,000 psi (69 MPa), when mixed to a plastic consistency and fully cured.

- If the washer is to be grouted in, it should be level and spaced between 3/8" (9 mm) and 1/2" (13 mm) off the floor to make room for the grout.
- Remove the washer leaving the spacers behind.

- Mix the grout to a plastic consistency per the manufacturer's instructions.
- Trowel the grout in to a depth slightly greater than the height of the spacers.
- Reinstall the washer over the mounting fasteners. Use the fasteners to pull the washer down securely on the spacers. Do not fully torque the fasteners.
- Clean away any excess grout outside the washer as per the manufacturer's instructions.
- Allow the grout to set for the minimum time recommended by the grout manufacturer for light use.
- Tighten the bolts until the machine is securely fastened.

If not using grout, place the washer-extractor in position over the holes, then insert the expansion bolts in the holes. Be sure to use 5/8-11 (M16) expansion bolts, and that they protrude above the surface by 2" (50 mm). Once in place, tighten the bolts. Place the washer-extractor in position above the bolts, and gradually tighten the nuts one after another to 195 Nm (144 ft lb).

## Using J-bolts

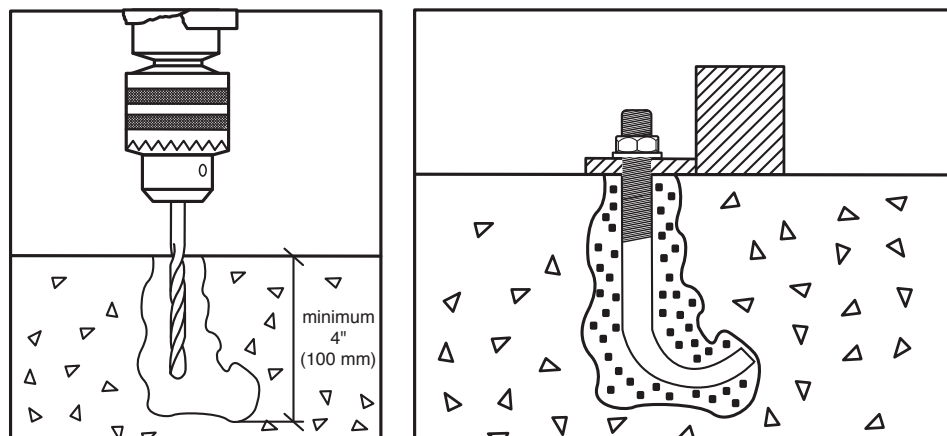

Before anchoring the machine to the floor, make sure that its minimum resistance is equal or higher than 3,500 psi (25 N/mm<sup>2</sup>).

First mark the locations of the mounting holes using the dimensions specified in the “Rigid Washing Machines” chart. Next make holes to a depth, at minimum, equal to 4" (100 mm). Make the holes big enough to insert the J-bolt and clean using compressed air. Insert the J-bolts in the holes and secure using


a suitable anchoring compound, ensuring that the bolt protrudes above the surface by 2" (50 mm). Be sure to use 5/8-11 (M16) J-bolts.

Place the washer-extractor in position above the bolts, and gradually tighten the nuts one after another 195 Nm (144 ft lb). Check the condition of the J-bolts one week after installation.

# INSTALLATION INSTRUCTION

## Connect the Drain Hose

1. The drain hose can be found shipped inside the drum with the installation kit. The clamp for this hose is in the installation kit. Attach the drain to the drain connection located near the bottom of the rear of the washer. This is a gravity-fed system, so you must install the drain hose with the outlet lower than the drain connection to ensure proper drainage. Do not kink the hose.

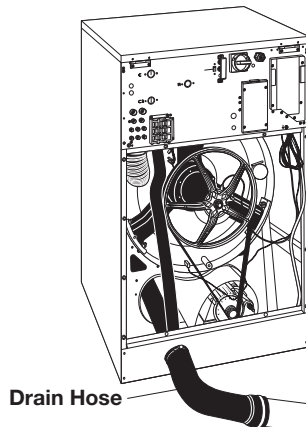

2. The drain hose should end over, or in a floor drain or drainage canal.
3. The drainage canal or drain pipe must be sized properly to handle the total output of all washers connected to the system. Each time a washer is added to the drain pipe, the size of the pipe must increase to accommodate the additional volume. The drain pipe at the first washer must be 3" (76 mm) diameter. The pipe must increase to 4" (100 mm) diameter before the second washer and 5" (127 mm) diameter before the third washer.

### Drain Connections

Use the provided drain hose to connect the washer's drain pipe to the facility drain or drain channel. Secure with the provided clamp. The capacity of discharged water for each washer model is 55.5 gallon/min (210 L/min).

### Water Hardness

Determine the water hardness level in water supply. Good wash results are dependent on water hardness. In areas that have medium and very hard water levels, a water softener may be required.

Contact your water or soap distributor for determining the proper soap and detergents to be used with your hardness levels for the best wash results.

### Water Supply Connections


Washers have 2 water inlets. For connection dimensions, see "Dimensions and Technical Specifications".

1. Always use the flexible hoses delivered with the washer. Do not use a fixed connection to the water supply.
2. Keep proper water pressure within range. See "Dimensions and Technical Specifications".
3. The water connection to the washer requires a 3/4" British Standard Pipe Thread fitting. The British Standard Pipe Thread end is identified with a label. Threading an GHT fitting or the GHT end of the adapter hose will damage the threads of the washer.
4. Flush water lines to remove debris. For countries with metric water supply connection, see "NOTE" below. Install the GHT (the end with no label) side of the inlet hoses to the hot and cold supply lines. Tighten fittings.  
**NOTE:** Metric thread adapters are provided in countries that require them. These brass adapters have internal BSPP threads and external NPT threads. One adapter should be attached (with sealing washer) to the GHT end of each water inlet hose. With this assembly, metric threads are now on both ends of the water inlet hose.
5. Attach the BSPP (the end with the label) end of adapter hoses to the washer. (On 55R, 55S, 65R, and 65S models, there is a hose screen included in the installation kit that needs to be placed here). Tighten fittings.
6. Turn on water and check for leaks in the system.

## External Supply Connections

All external liquid soap hose connections must be tight. Double check that the clamps are tight after connections are made. Make sure any unused open connections are sealed with an appropriate cover.

The connections for the liquid soap are on the rear of the washer and must be drilled open in order to use them. Only drill out the connections that will be used. There are 8

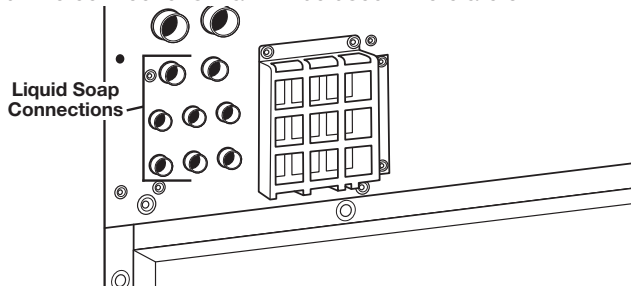

3/8" (9 mm) diameter connections; use a 5/16" (8 mm) diameter drill bit to drill out these holes. There can only be 8 pumps in the system. Be sure to clean out all the drill shavings completely so

they do not clog the inlets and hoses. Connect to liquid soap pumps to the left openings first. Set the flow rate of the pumps between 16 and 26 gallon/hr (60 and 100 L/hr).

**IMPORTANT:** The incoming water dilutes the liquid soap and brings it into the tub assembly.

Check with your liquid soap provider to ensure that your soap is inert to Polypropylene (PP) and Polyvinyl Chloride (PVC) materials.

Make sure the hoses and wiring for the liquid soap pumps are not damaged, pinched, rubbed or damage to the machine could occur.

The liquid soap pumps used must be capable of providing the requested quantity in less than 30 seconds.

# ELECTRICAL CONNECTION

## ⚠ WARNING



### Fire Hazard

Use appropriate gauge of solid copper wire. (See chart in “Electrical Requirements” section).

Use a UL listed strain relief.

Disconnect power before making electrical connections.

Connect neutral wire (white) to terminal (N).

Ground wire (green or bare wire) must be connected to ground connector (PE).

Connect remaining 3 supply wires to remaining 3 terminals (L1, L2 and L3).

Securely tighten all electrical connections.

Failure to do so can result in death, fire, or electrical shock.

### Connection to Washer:


The washer must be electrically grounded in accordance with all local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, latest edition, or Canadian Electrical Code, CSA C22.1

### Direct Wire Installation:


Power supply cable must match power supply (3-wire) and be:

- To access the disconnect, lift the top cover and support it with the prop rod.
- Copper wire of appropriate gauge for amperage requirement (see “Manufacturer’s Recommended Minimal Conductor section”). Solid wire is recommended. Do not use aluminum wire.

Knock out for  
Electrical Connection

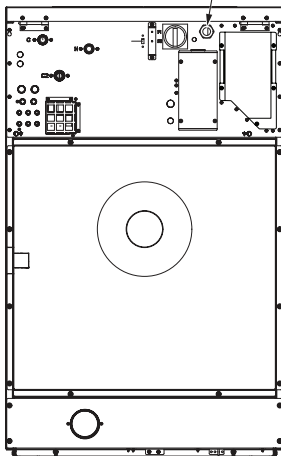

- Flexible armored cable or flexible conduit must be used for the supply connections. Use the hole in the rear of the washer for routing. Connection is made directly to the disconnect switch inside the back top panel of the washer. The Aluminum Lug for Ground is next to that disconnect body. A Flat-head screwdriver can be used for the power wires to the disconnect as well as the ground to the lug. Incoming service wires are applied to the top of the disconnect body. If the washer is single phase, (only 2 power wires) the outside positions of the disconnect should be used (leaving the center pole empty). Tighten down all connections including the unused position in the single-phase service case. Leaving a small radius of slack for the wires inside the washer, check that the cable is well held in place.
- Check the rating plate on the washer. Make sure that the supply phase and voltage match the rating of the washer. Some locations require an autonomous power switch (I) at the current input, with a minimum of 0.12" (3 mm) between contacts. Fit a 300 mA, type A, immediate response differential protection. Check your local regulations. Insert the flexible armored cable or flexible conduit through the hole in the rear panel. Secure the armored cable or conduit to the rear panel. Connect the wiring per the correct illustration.

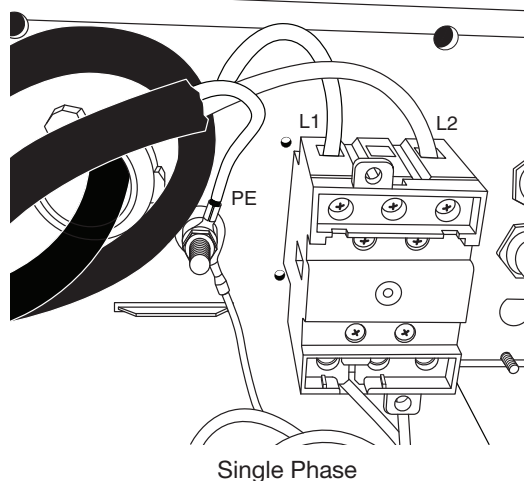


Single Phase

# ELECTRICAL CONNECTION

## Multiple Single-Phase Machines in Line

When installing multiple single-phase washers into an existing 3-phase power supply, alternating the phases used as the hot leg is recommended to evenly distribute power on the system. See illustration.

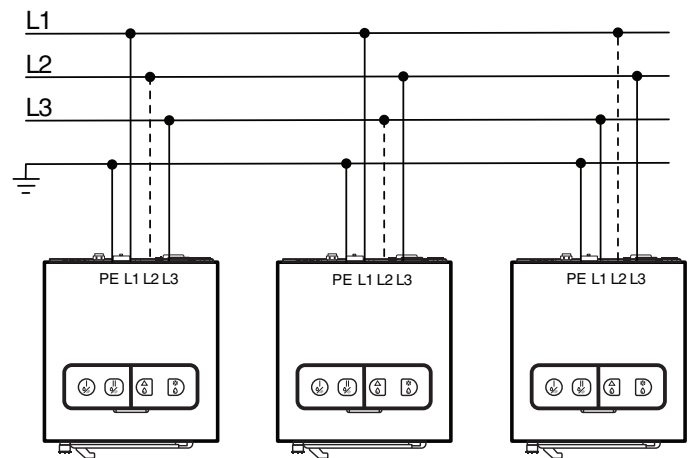

### Instructions For Grounding

This appliance must be connected to an equipment grounding conductor that must run with the circuit conductors and connected to the aluminum ground lug inside the rear electric panel.

Connect the terminal strip and check that the connections correspond to the operating voltage. Fit a 300 mA, type A, immediate response differential protection.


The machine must be grounded. See the illustration on the previous page.

## Equipotential Bonding

In addition to the equipment-grounding conductor discussed earlier that runs with the circuit conductor's and is connected to the equipment grounding terminal, all washers or appliances in the vicinity must be permanently interconnected with a equipotential bonding conductor.

The external connection points marked on the back of the washer serve for this purpose. See illustration below.

The cross-sectional area of the conductor must be at least electrically equivalent to the cross-sectional area of the copper conductor used to power the washer.


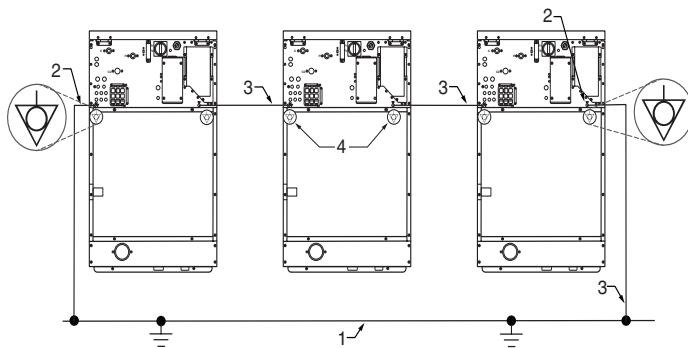


- 1. Protective grounding structure
- 2. External protective conductor connection point
- 3. Protective conductor
- 4. Grounding identification

## Electrical connection of the liquid soap supply system, if supplied (Optional on vended machines)

The power supplied to the liquid soap system must come from an external electric source. Do not connect the system in the washer. All work must be performed by a qualified technician in compliance with all applicable local codes. Refer to the wiring diagram found inside the washer attached to the side panel.

There is a labeled terminal block on the rear of the washer for control signal connections. There is a corresponding strip of LED lights to show when each signal is active. Refer to the wiring diagram found inside the washer attached to the side panel. Supply pump control signals are 24 VAC, maximum current is 10 mA. Wiring from the liquid soap system must be UL Recognized (AVLV2 and AVLV8) and rated for 300 V minimum. Route all wires through the supplied plastic bushing, making sure to secure them with the cable clamp. Affix the cover to the terminal block access before applying electric power to the washer. See the Programming Guide for details on programming the liquid soap system.

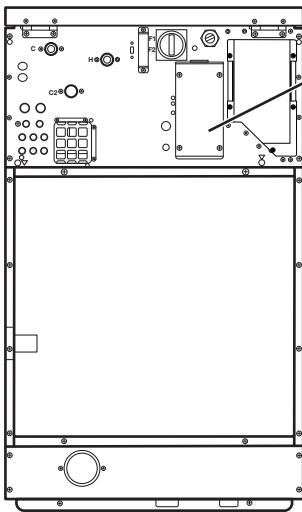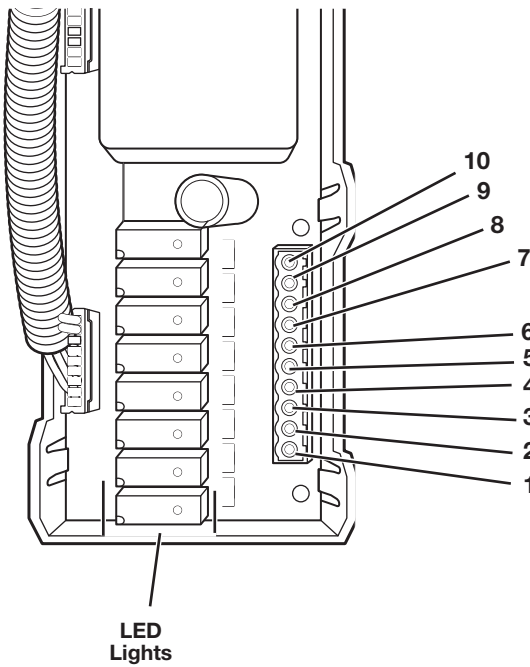

External Liquid Soap Connection Cover

1	Detergent signal
2	Bleach signal
3	Softener signal
4	Programmable signal 1
5	Programmable signal 2
6	Programmable signal 3
7	Programmable signal 4
8	Programmable signal 5
9	No output (do not use)
10	Neutral (common)



# WASHER MAINTENANCE

## Maintenance Schedule

### After Each Load

- Remove debris from the wash drum including paper clips, coins, and other hard items.
- When not in use, leave the washer door open to allow the washer to air out and prolong gasket life.
- When not in use, leave detergent lids open to allow dispenser to air out.

### Daily Maintenance

- Clean water, detergent, and other stains off of the washer with a soft cloth dampened with a mild detergent solution.
- Dry with a soft cloth. Do not use abrasives.
- Clean detergent residue and other contamination off the door seal with a soft cloth dampened only with a mild detergent solution. Do not use solvents or acids. Do not lubricate seal with oil or grease.
- Remove residue from the detergent hoppers with a plastic scraper. Wipe the hoppers with a soft cloth dampened with water.
- Check water inlets for leaks. Correct as necessary.
- Check drain valve for leakage during a wash cycle (the valve is in open position when there is no electricity to it).

### Maintenance Every 200 Working Hours or Every Month

Make sure external liquid soap supply system is not leaking. Check all hose joints, screw joints and all connections in the system.

### Maintenance Every 500 Working Hours or 3 Months

## ⚠ WARNING



### Electrical Shock Hazard

**Disconnect power before servicing.**

**Replace all parts and panels before operating.**

**Failure to do so can result in death or electrical shock.**

4. Check mounting bolt tightness. Retighten if necessary.
5. Inspect all hoses and connections inside the washer for leaks and correct as necessary.
6. Wipe off any stains with a soft cloth dampened with water or a mild detergent solution. Be sure that control components are not exposed to dust and moisture during cleaning.
7. Put covers back on and check that all bolts are properly torqued.
8. Turn on power at circuit breaker or fuse box.

### Maintenance Every 1,000 Working Hours or 6 Months

- Turn off hot and cold water to the washer at the valves. Clean water filters.
- Clean and remove dirt and dust from:
  - the inverter cooling fin
  - the motor cooling fins
  - the inverter internal fan
  - the external fan
  - the external air relieves
- Make sure the fan in the inverter cool fins is functioning.

- Observe the washer from the back for one wash cycle. Be sure that water does not leak out of the drain during the wash part of the cycle and that it drains freely at the beginning of extraction. Clean the drain if either of these symptoms are observed.
1. Turn off power to washer at the circuit breaker or fuse box.
  2. Check the tightness of the bolts securing the rear panel of the washer.
  3. Check the belt for damage and proper tightness.



# MAYTAG® COMMERCIAL LAUNDRY LIMITED WARRANTY FOR VENDED PRODUCT MULTI-LOAD WASHERS

**MYR20, MYR25, MYR30, MYR40, MYR55, MYR65**  
**MYS20, MYS30, MYS40, MYS55, MYS65**

## IF YOU NEED SERVICE:

Contact your authorized Maytag® Commercial Laundry distributor.  
To locate your authorized Maytag® Commercial Laundry distributor,  
call 1-800-662-3587, or for web inquiries, visit  
[www.maytagcommerciallaundry.com](http://www.maytagcommerciallaundry.com).

For written correspondence:

**Maytag® Commercial Laundry Service Department**  
**2000 N M 63**  
**Benton Harbor, Michigan 49022-2632 USA**

## TEN YEAR LIMITED WARRANTY

### WHAT IS COVERED

#### **FIVE YEAR LIMITED WARRANTY (PARTS ONLY — LABOR NOT INCLUDED)**

For the first five years from the original date of purchase, when this commercial appliance is installed, operated, and maintained according to the instructions attached to or furnished with the product, Maytag brand of Whirlpool Corporation (hereafter "Maytag") will pay for factory specified replacement parts to correct defects in materials or workmanship that existed when this commercial appliance was purchased. This limited warranty does not include labor.

#### **SIXTH THROUGH TENTH YEAR LIMITED WARRANTY (CERTAIN COMPONENT PARTS ONLY – LABOR NOT INCLUDED)**

In the sixth through tenth years from the date of original purchase, when this commercial appliance is installed, operated, and maintained according to instructions attached to or furnished with the product, Maytag will pay for factory specified replacement parts for the following components to correct non-cosmetic defects in materials or workmanship in the part that prevent function of the product and that existed when this commercial appliance was purchased. This is a limited 10-year warranty on the below named parts only and does not include labor.

- Outer shell
- Drum and shaft assembly
- Inner welded frame
- Bearings and seals

**YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PART REPLACEMENT AS PROVIDED HEREIN.** Maytag recommends that you use an "authorized" service provider to diagnose and repair your Commercial Laundry product. Maytag will not be responsible under this warranty to provide additional replacement parts as a result of incorrect diagnosis or repair by an "unauthorized" service company. Except in the European Union, this limited warranty is valid only when the commercial appliance is used in the country in which it was purchased. This limited warranty is effective from the date of the original consumer purchase. Proof of original purchase date is required to obtain service under this limited warranty.

### WHAT IS NOT COVERED

1. All other costs including labor, transportation, shipping, or custom duties for covered parts.
2. Factory specified replacement parts if this commercial appliance is used for other than normal, commercial use or when it is used in a manner that is inconsistent to published user or operator instructions and/or installation instructions.
3. Service calls to correct the installation of your commercial appliance, to instruct you on how to use your commercial appliance, to replace or repair house fuses, or to correct external wiring or plumbing.
4. Service calls to repair or replace appliance light bulbs, air filters, or water filters. Consumable parts are excluded from warranty coverage.
5. Damage resulting from improper handling of product during delivery, theft, accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with local electrical or plumbing codes, or use of products not approved by Maytag.
6. Pick up and delivery. This commercial appliance is designed to be repaired on location.
7. Repairs to parts or systems resulting from unauthorized modifications made to the commercial appliance.
8. The removal and reinstallation of your commercial appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.
9. Damage resulting from exposure to chemicals.
10. Changes to the building, room, or location needed in order to make the commercial appliance operate correctly.
11. Factory specified replacement parts on commercial appliances with original model/serial numbers that have been removed, altered, or cannot be easily determined.
12. Discoloration, rust, or oxidation of stainless steel surfaces.
13. Factory specified replacement parts as a result of incorrect diagnosis or repair by an "unauthorized" service company.
14. Replacement parts during the sixth through tenth years from the date of original purchase where the commercial appliance is installed, operated and maintained in a setting other than a vended and/or multi-housing environment.
15. Replacement parts during the sixth through tenth years from the date of original purchase where the defective part is not preventing the functioning of the product.

**The cost of repair or replacement under these excluded circumstances shall be borne by the customer.**

## DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO TEN YEARS OR THE SHORTEST PERIOD ALLOWED BY LAW. Some locations do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. THE BENEFITS GIVEN TO YOU BY THIS WARRANTY ARE IN ADDITION TO OTHER RIGHTS AND REMEDIES AVAILABLE TO YOU UNDER LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THIS WARRANTY RELATES. PLEASE CONTACT MAYTAG FOR FURTHER INFORMATION ON WARRANTY TERMS.

## DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY

Maytag makes no representations about the quality, durability, or need for service or repair of this commercial appliance other than the representations contained in this warranty. If you want a longer or more comprehensive warranty than the limited warranty that comes with this commercial appliance, you should ask your retailer about buying an extended service plan. The benefits to you given by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates. Please contact Maytag for further information on warranty terms.

## LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES

**YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PART REPLACEMENT AS PROVIDED HEREIN.** MAYTAG SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some locations do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. THE BENEFITS GIVEN TO YOU BY THIS WARRANTY ARE IN ADDITION TO OTHER RIGHTS AND REMEDIES AVAILABLE TO YOU UNDER LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THIS WARRANTY RELATES. PLEASE CONTACT MAYTAG FOR FURTHER INFORMATION ON WARRANTY TERMS.

# MAYTAG® COMMERCIAL LAUNDRY LIMITED WARRANTY FOR ON-PREMISE PRODUCT MULTI-LOAD WASHERS

**MYR20, MYR25, MYR30, MYR40, MYR55, MYR65  
MYS20, MYS30, MYS40, MYS55, MYS65**

## IF YOU NEED SERVICE:

Contact your authorized Maytag® Commercial Laundry distributor.  
To locate your authorized Maytag® Commercial Laundry distributor,  
call 1-800-662-3587, or for web inquiries, visit  
[www.maytagcommerciallaundry.com](http://www.maytagcommerciallaundry.com).

For written correspondence:

**Maytag® Commercial Laundry Service Department**  
**2000 N M 63**  
**Benton Harbor, Michigan 49022-2632 USA**

## FIVE YEAR LIMITED WARRANTY

### WHAT IS COVERED

#### THREE YEAR LIMITED WARRANTY (PARTS ONLY — LABOR NOT INCLUDED)

For the first Three years from the original date of purchase, when this commercial appliance is installed, operated, and maintained according to the instructions attached to or furnished with the product, Maytag brand of Whirlpool Corporation (hereafter "Maytag") will pay for factory specified replacement parts to correct defects in materials or workmanship that existed when this commercial appliance was purchased. This limited warranty does not include labor.

#### FORTH AND FIFTH YEAR LIMITED WARRANTY (CERTAIN COMPONENT PARTS ONLY – LABOR NOT INCLUDED)

In the Forth and Fifth years from the date of original purchase, when this commercial appliance is installed, operated, and maintained according to instructions attached to or furnished with the product, Maytag will pay for factory specified replacement parts for the following components to correct non-cosmetic defects in materials or workmanship in the part that prevent function of the product and that existed when this commercial appliance was purchased. This is a limited 5-year warranty on the below named parts only and does not include labor.

- Outer shell
- Drum and shaft assembly
- Inner welded frame
- Bearings and seals

**YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PART REPLACEMENT AS PROVIDED HEREIN.** Maytag recommends that you use an "authorized" service provider to diagnose and repair your Commercial Laundry product. Maytag will not be responsible under this warranty to provide additional replacement parts as a result of incorrect diagnosis or repair by an "unauthorized" service company. Except in the European Union, this limited warranty is valid only when the commercial appliance is used in the country in which it was purchased. This limited warranty is effective from the date of the original consumer purchase. Proof of original purchase date is required to obtain service under this limited warranty.

### WHAT IS NOT COVERED

1. All other costs including labor, transportation, shipping, or custom duties for covered parts.
2. Factory specified replacement parts if this commercial appliance is used for other than normal, commercial use or when it is used in a manner that is inconsistent to published user or operator instructions and/or installation instructions.
3. Service calls to correct the installation of your commercial appliance, to instruct you on how to use your commercial appliance, to replace or repair house fuses, or to correct external wiring or plumbing.
4. Service calls to repair or replace appliance light bulbs, air filters, or water filters. Consumable parts are excluded from warranty coverage.
5. Damage resulting from improper handling of product during delivery, theft, accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with local electrical or plumbing codes, or use of products not approved by Maytag.
6. Pick up and delivery. This commercial appliance is designed to be repaired on location.
7. Repairs to parts or systems resulting from unauthorized modifications made to the commercial appliance.
8. The removal and reinstallation of your commercial appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.
9. Damage resulting from exposure to chemicals.
10. Changes to the building, room, or location needed in order to make the commercial appliance operate correctly.
11. Factory specified replacement parts on commercial appliances with original model/serial numbers that have been removed, altered, or cannot be easily determined.
12. Discoloration, rust, or oxidation of stainless steel surfaces.
13. Factory specified replacement parts as a result of incorrect diagnosis or repair by an "unauthorized" service company.
14. Replacement parts during the Forth and Fifth years from the date of original purchase where the commercial appliance is installed, operated and maintained in a setting other than a vended and/or multi-housing environment.
15. Replacement parts during the Forth and Fifth years from the date of original purchase where the defective part is not preventing the functioning of the product.

**The cost of repair or replacement under these excluded circumstances shall be borne by the customer.**

## DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO FIVE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some locations do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. THE BENEFITS GIVEN TO YOU BY THIS WARRANTY ARE IN ADDITION TO OTHER RIGHTS AND REMEDIES AVAILABLE TO YOU UNDER LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THIS WARRANTY RELATES. PLEASE CONTACT MAYTAG FOR FURTHER INFORMATION ON WARRANTY TERMS.

## DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY

Maytag makes no representations about the quality, durability, or need for service or repair of this commercial appliance other than the representations contained in this warranty. If you want a longer or more comprehensive warranty than the limited warranty that comes with this commercial appliance, you should ask your retailer about buying an extended service plan. The benefits to you given by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates. Please contact Maytag for further information on warranty terms.

## LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES

**YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PART REPLACEMENT AS PROVIDED HEREIN.** MAYTAG SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some locations do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. THE BENEFITS GIVEN TO YOU BY THIS WARRANTY ARE IN ADDITION TO OTHER RIGHTS AND REMEDIES AVAILABLE TO YOU UNDER LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THIS WARRANTY RELATES. PLEASE CONTACT MAYTAG FOR FURTHER INFORMATION ON WARRANTY TERMS.

# NOTES

# NOTES

# NOTES

# NOTES

# NOTES

